

---

Subject: Re: Renegade Problems

Posted by [danpaul88](#) on Wed, 25 Apr 2007 18:24:45 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Your +5v rail is showing as 4.2 volts, which is probably outside or right on the borderline of the processors tolerance range...

It could be problems with the sensors, or it could be that your PSU is not supplying enough power.. either because its dying or you have too many devices hooked up to it.

---