
Subject: Re: microSD

Posted by [_SSnipe_](#) on Fri, 26 Dec 2008 09:14:52 GMT

[View Forum Message](#) <> [Reply to Message](#)

Saberhawk wrote on Fri, 26 December 2008 01:08SSnipe wrote on Fri, 26 December 2008 02:51
I have one of those phone chips (2 gb) you slide into one of those memory card adapter which is just like one of those digital cameras have and I plug it into my memory card reader on my pc front panel to copy music on to (which I have done dozens of times)
but all of a sudden I can get it to work, I place the memory card in there and open my computer to open it up and all it does is freeze that explore window for like a few minutes till it says nothing there, if I were to take it out while it freezes it the explore window it instantly unfreeze and says empty but when it is in just shows hourglass for fucking forever...take it out boom its fast and unfrozen and says its empty (well duh its not in) and over and over...now my mom has the same pc I do and it worked for 3 sec then now it is doing what mine is doing I thought it was my memory card adapter until I used my sister which is giving me the same effect

wtf is going on

if u need ss or video just ask

Sounds like the chip died. Try it in your player and see if it still works or not...

Cant be that wont work and I have 2 disk...one I just got today...im try my moms pc more more time tomorrow with both disk and both adapters but for now im looking at it and anything at all that shows that drive or whats on it freezes that application

explore
computer management
etc
