

---

Subject: Re: CD Drive

Posted by [Caveman](#) on Mon, 22 Feb 2010 23:43:48 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Autorun is probably turned off..

My computer > Right click on CD drive > Properties > Autoplay > select what you want it to do with the given inserted media.

---