
Subject: Help YSLMuffins fix her soundcard!
Posted by [havocide3](#) on Tue, 29 Jun 2004 22:18:52 GMT
[View Forum Message](#) <> [Reply to Message](#)

I've had that problem

But I found that if I left my Bass and Treble at the defaults (50%) that I wouldn't get the problem. Also, most likely on the back of your subwoofer look for a switch that has most likely 2 channel and 4 channel, switch it to 2 and see if that helps.
